


ATG L600 X4 Assambly Manual

Powered by Foxtechfpv.com

1. Open Box

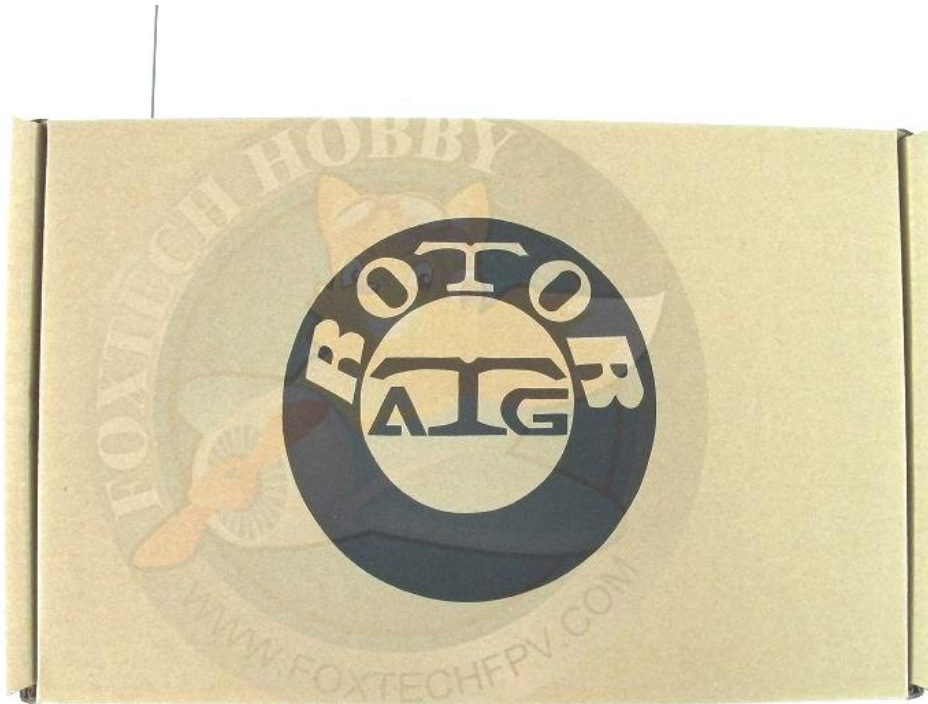

Packing Box.



2. Frame Arm Assembly



Frame Arm assembly.



Aligning the plastic motor seat and carbon frame to ensure holes in a line and lock tighten 2 screws.


Motor Seat

Holder A Holder B



Trim Motor Seat, Holder A and Holder B on a surface


Trim Frame Arm.

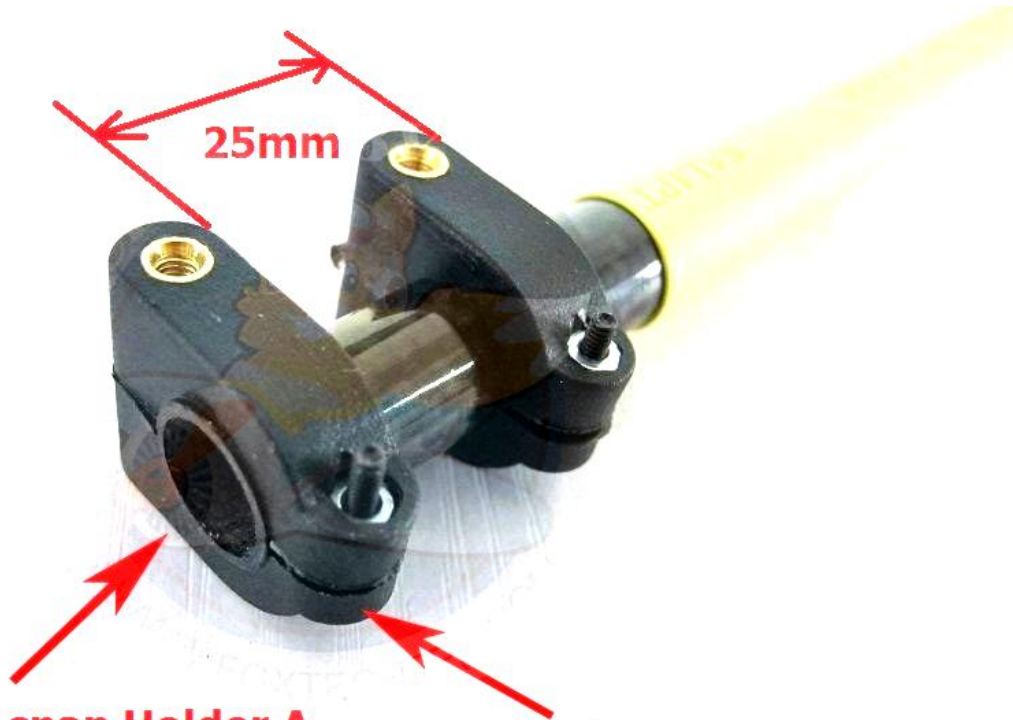

Trim and snap Holder A to top of frame

Tighten this screw only

Trim and snap Holder A to top of frame and tighten Holder A screw.

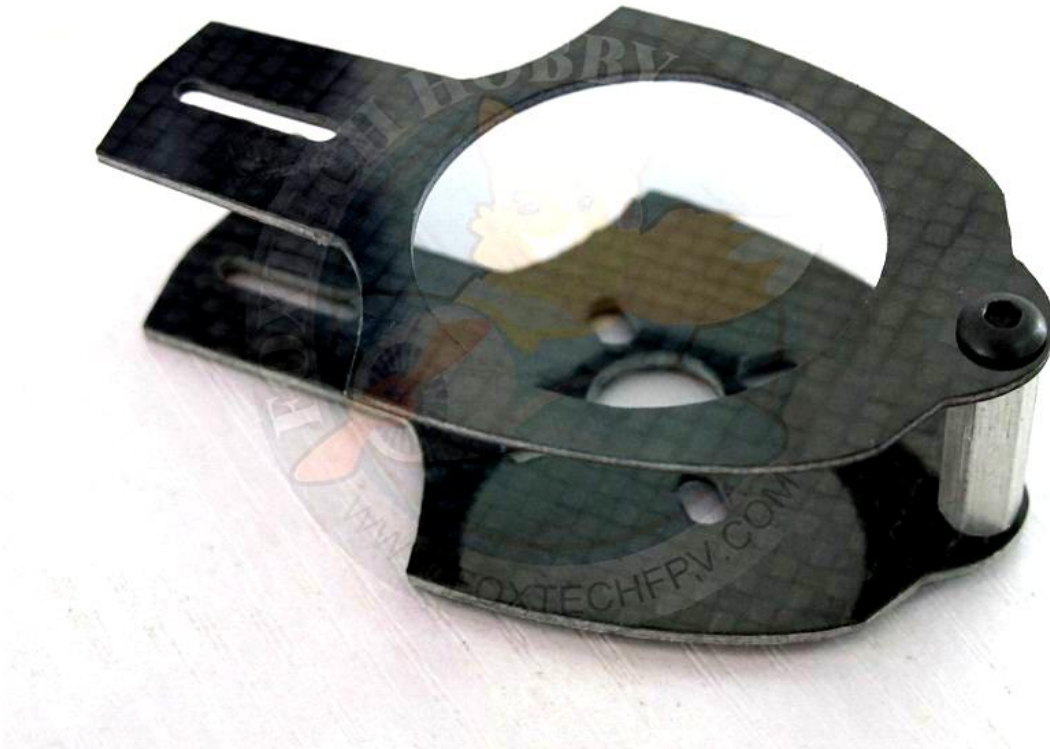

Motor Seat assembly.



Assemble Motor Seat on Frame Arm.




Upward view.




Finished.

3. Fuselage Assembly

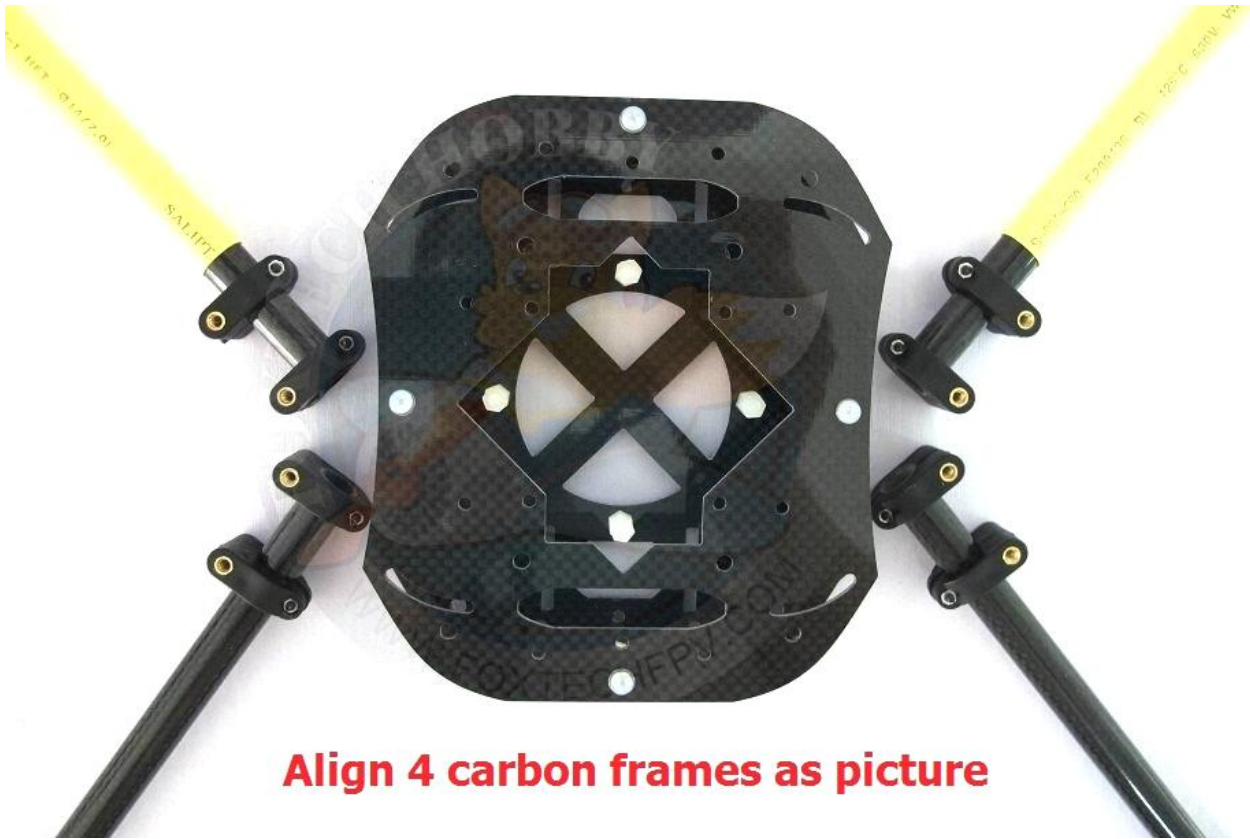


Align 4 carbon frames as picture

Fuselage assembly

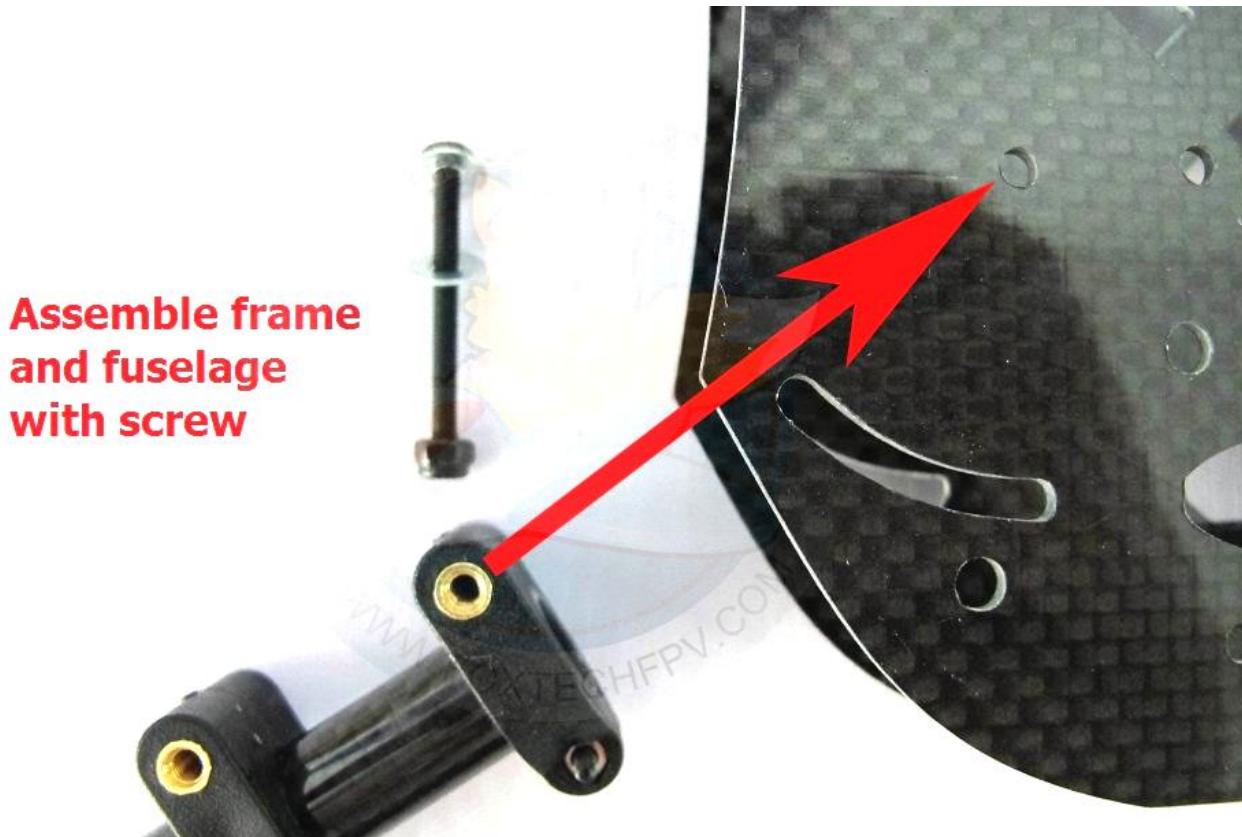


Assemble frame and fuselage with screw


Fuselage assembly

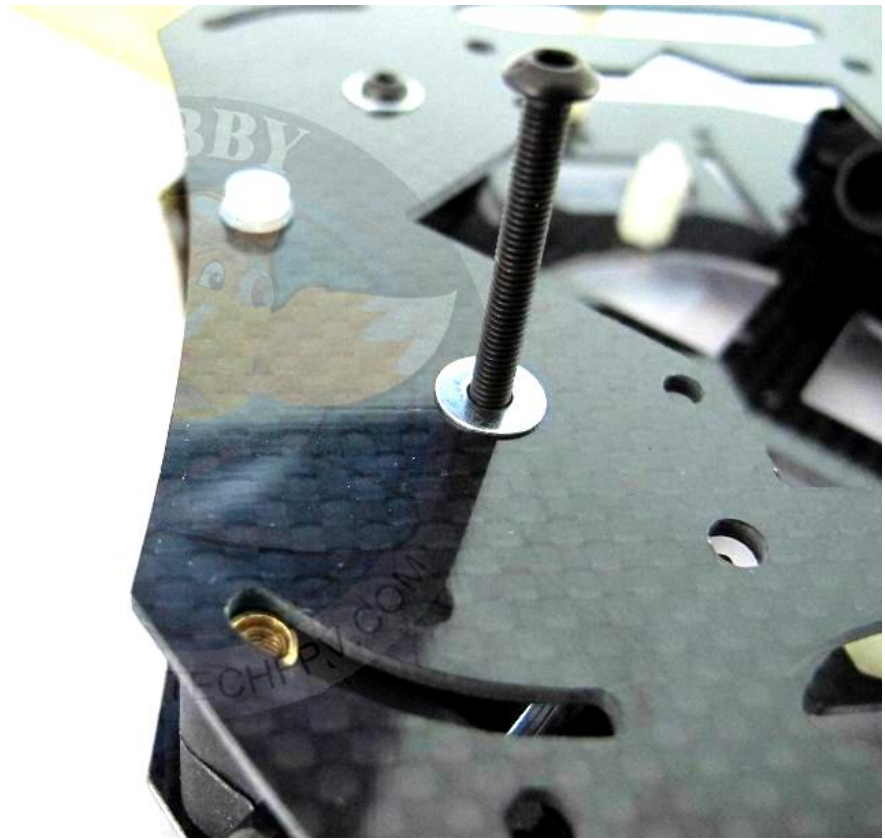


Fuselage assembly

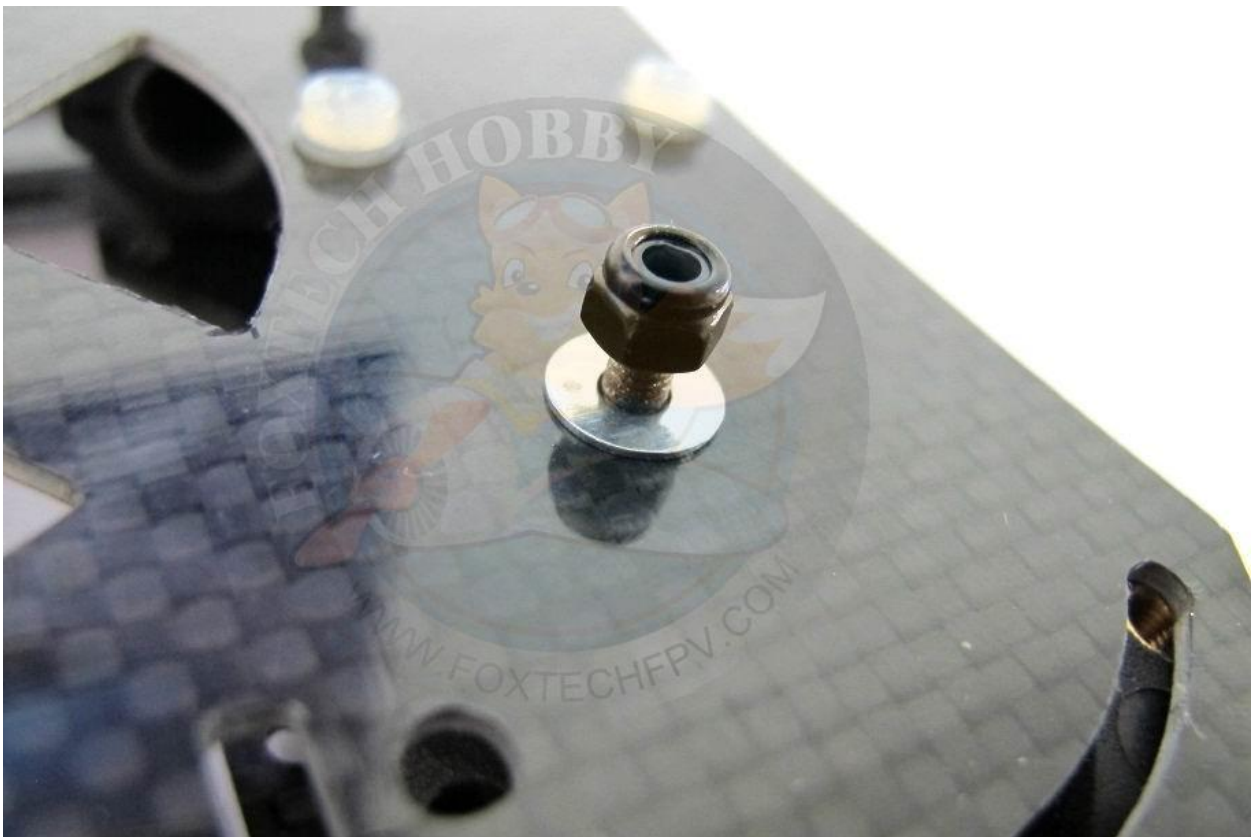

Fuselage assembly

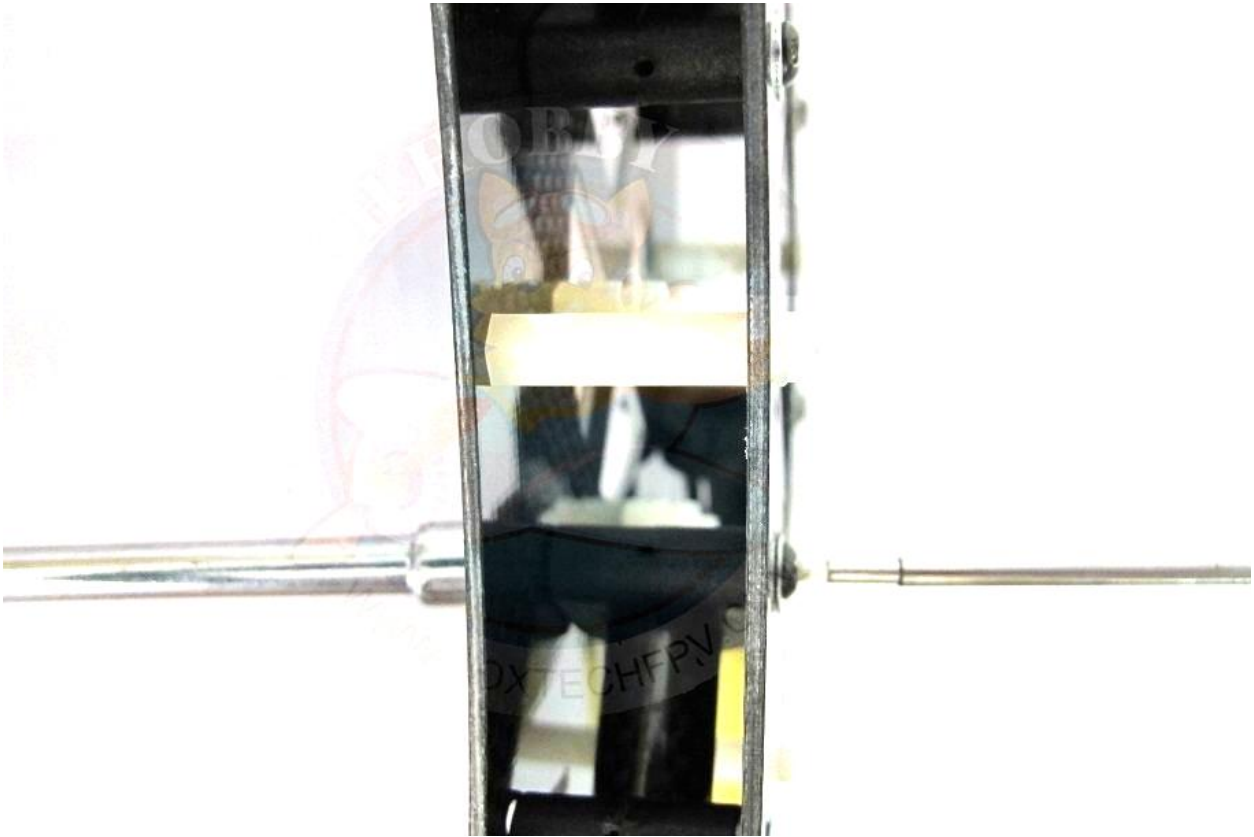

Tighten screw.

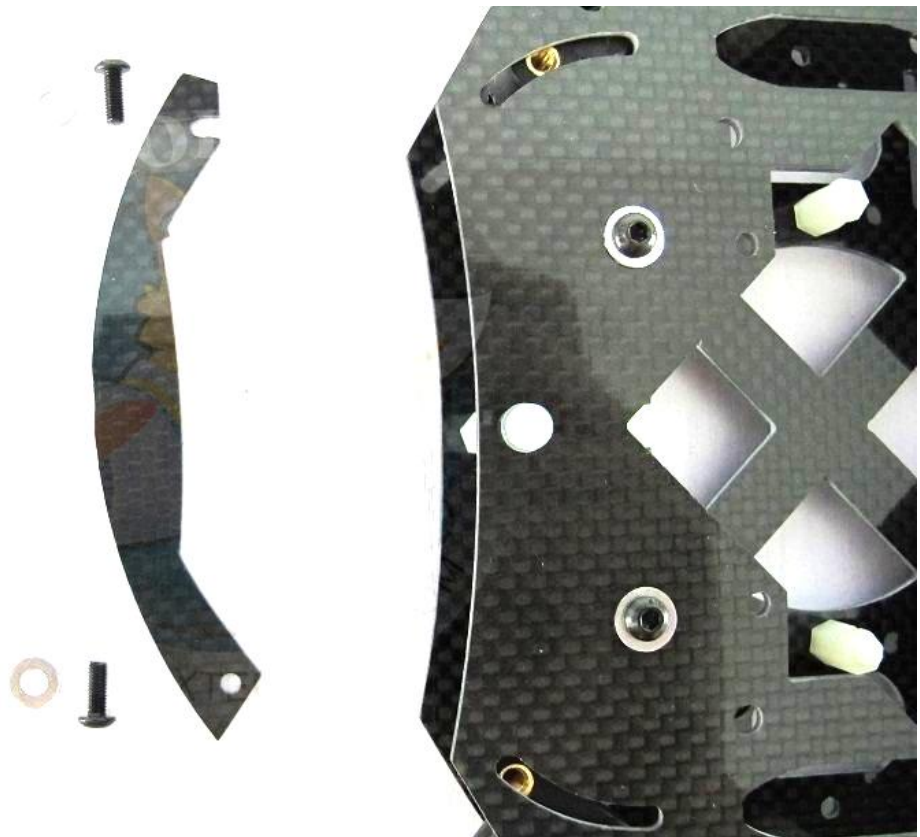

Frame Arm Locker assembly.




Frame Arm Locker assembly.

**Don't over tighten screws
to allow Frame Arm can
move lightly**



Frame Arm Locker assembly.

**Don't over tighten screws to allow
Frame Arm can move lightly**

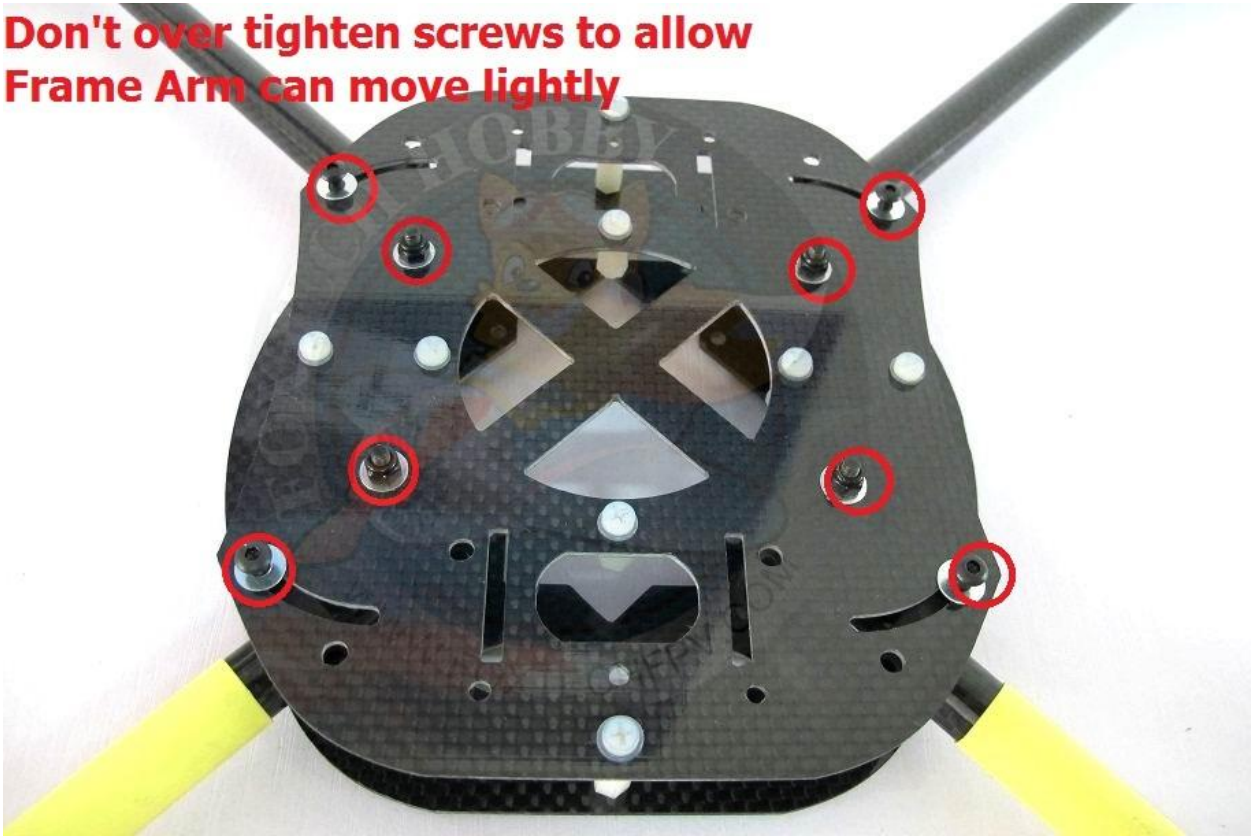




Frame Arm Locker assembly.

**Tighten 4 Holder B
screws must!**



4. Load Mount Pipe Assembly


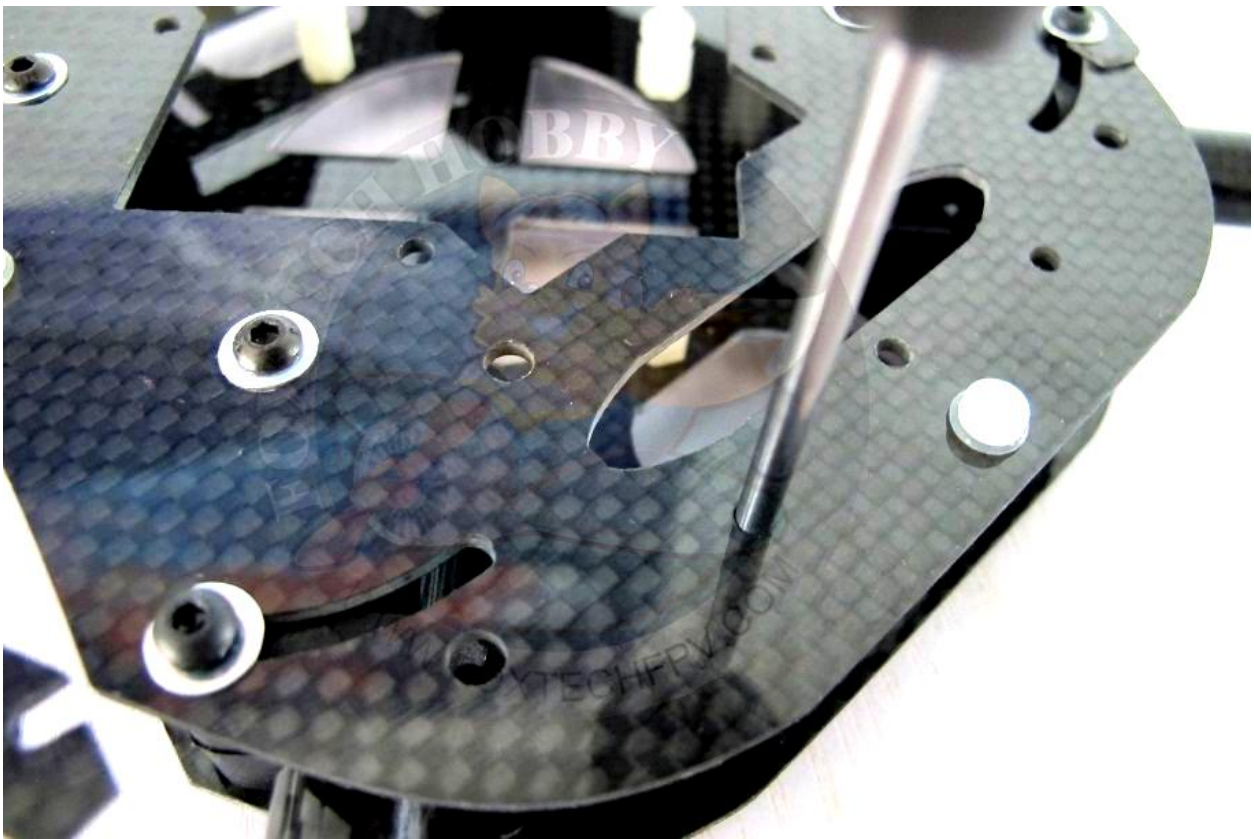


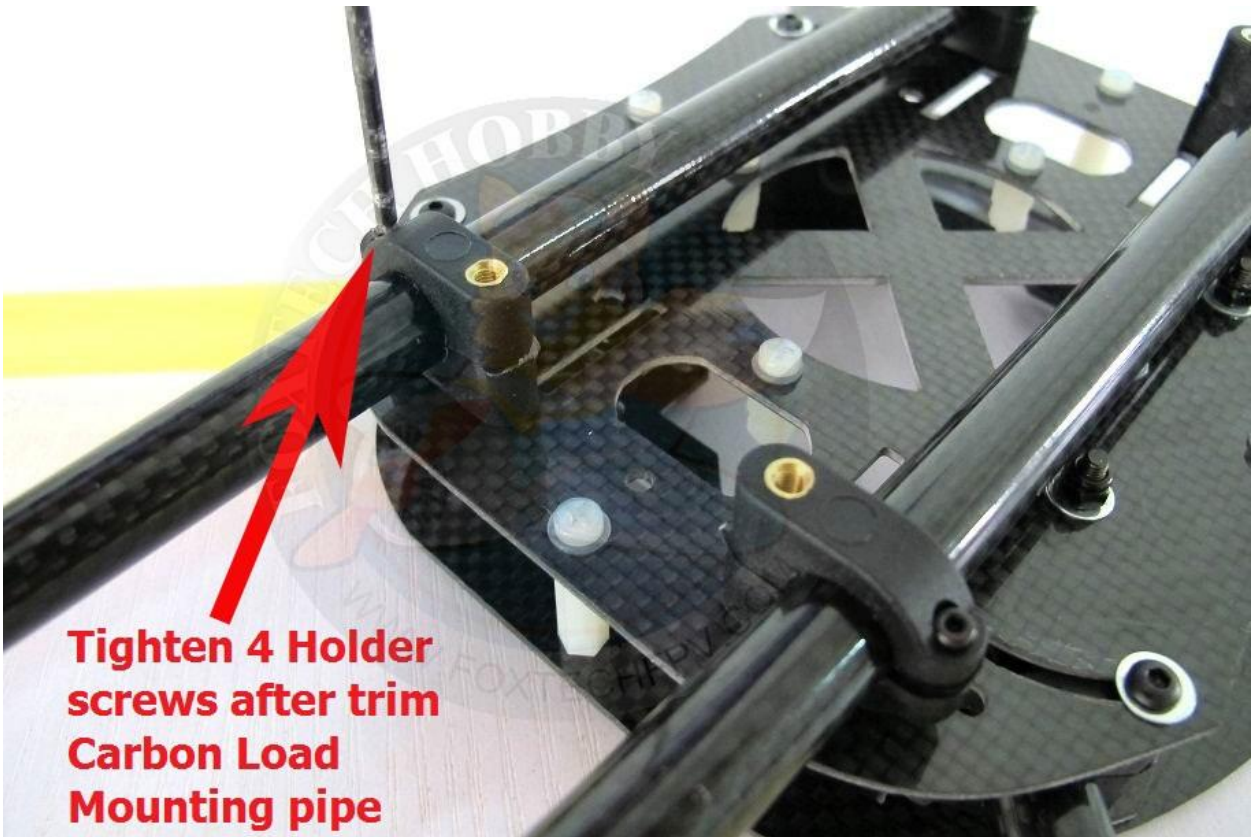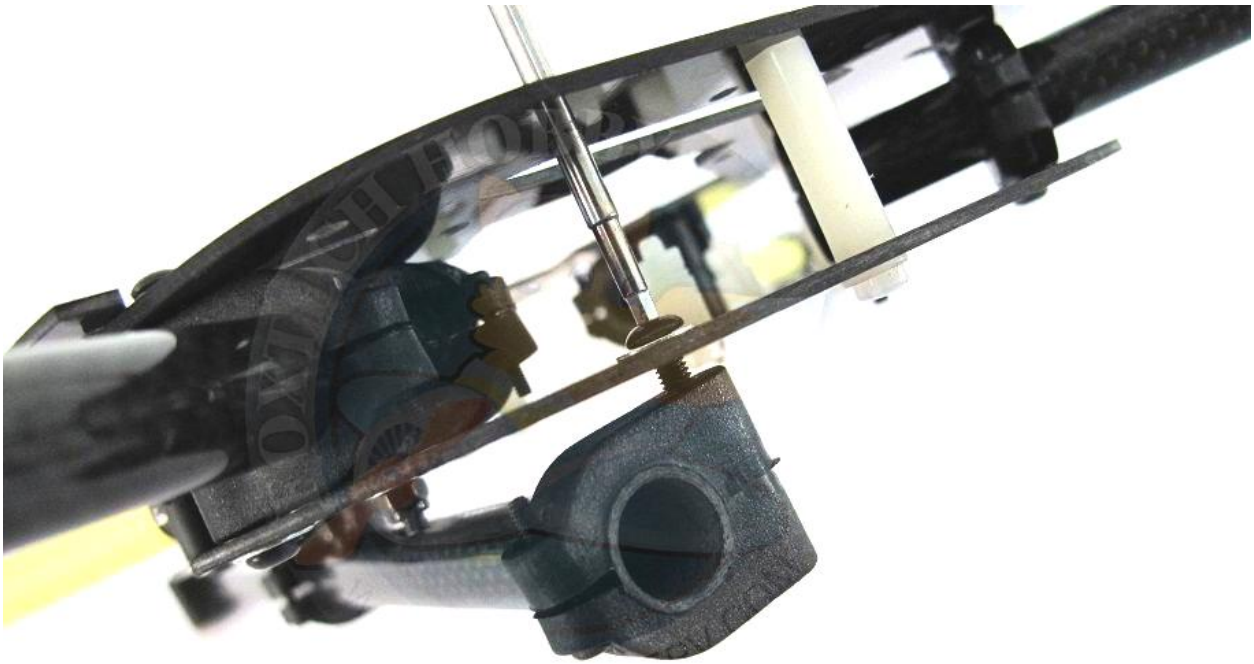

**Tighten 4 Holder
screws after trim
Carbon Load
Mounting pipe**


5. Device Mounting Plate Assembly

Device Mounting Plate assembly

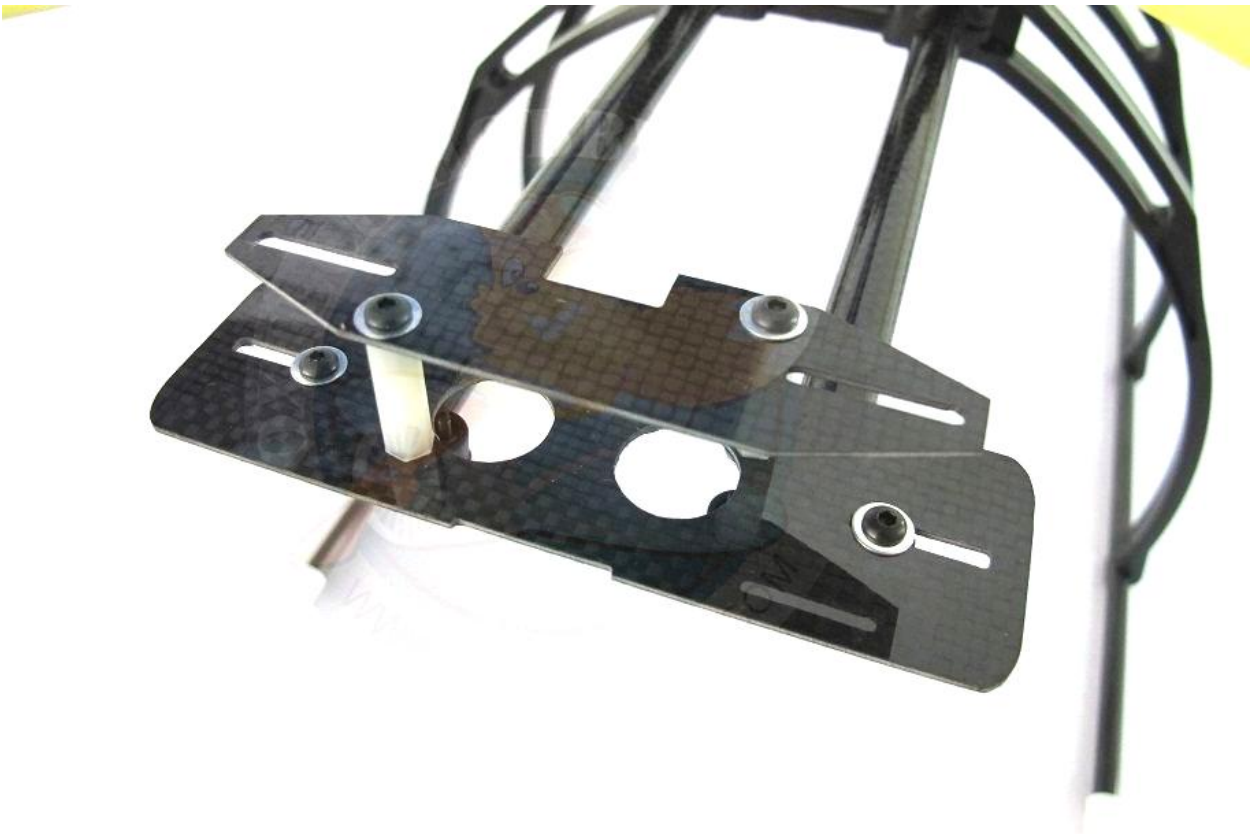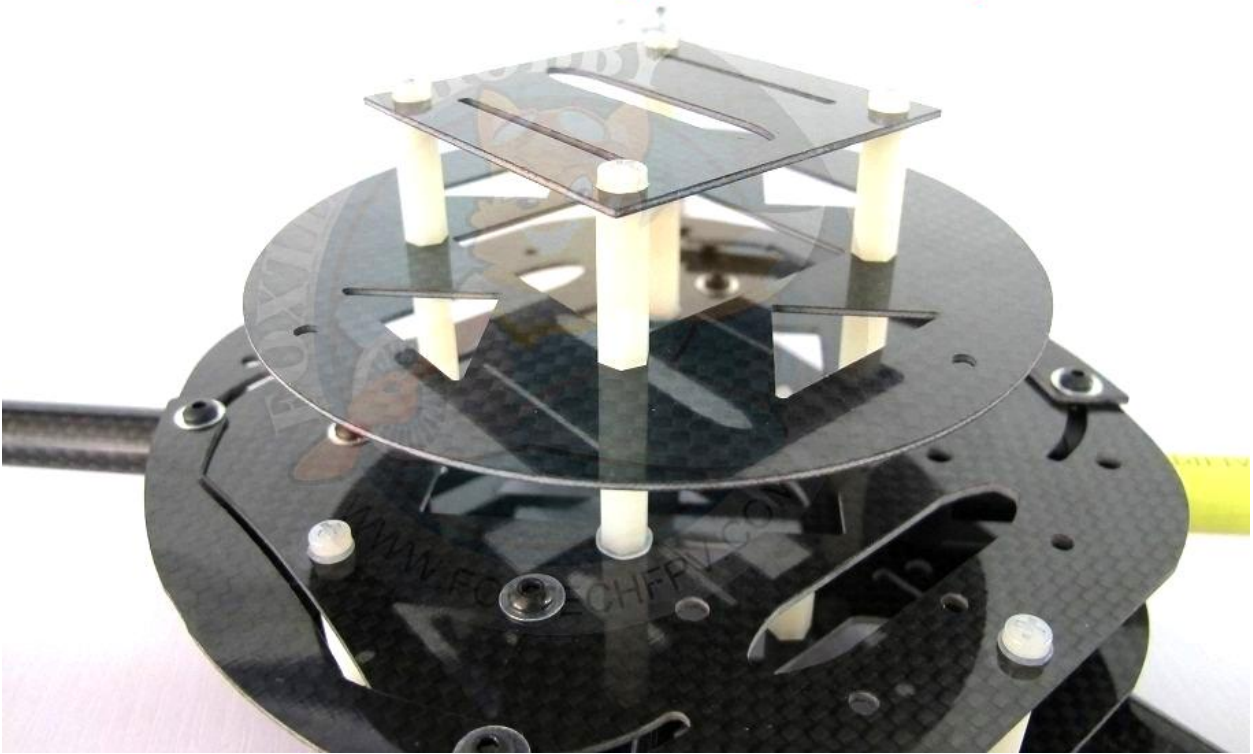

6. Landing Gear Assembly

**Bend landing gear
and assamble**

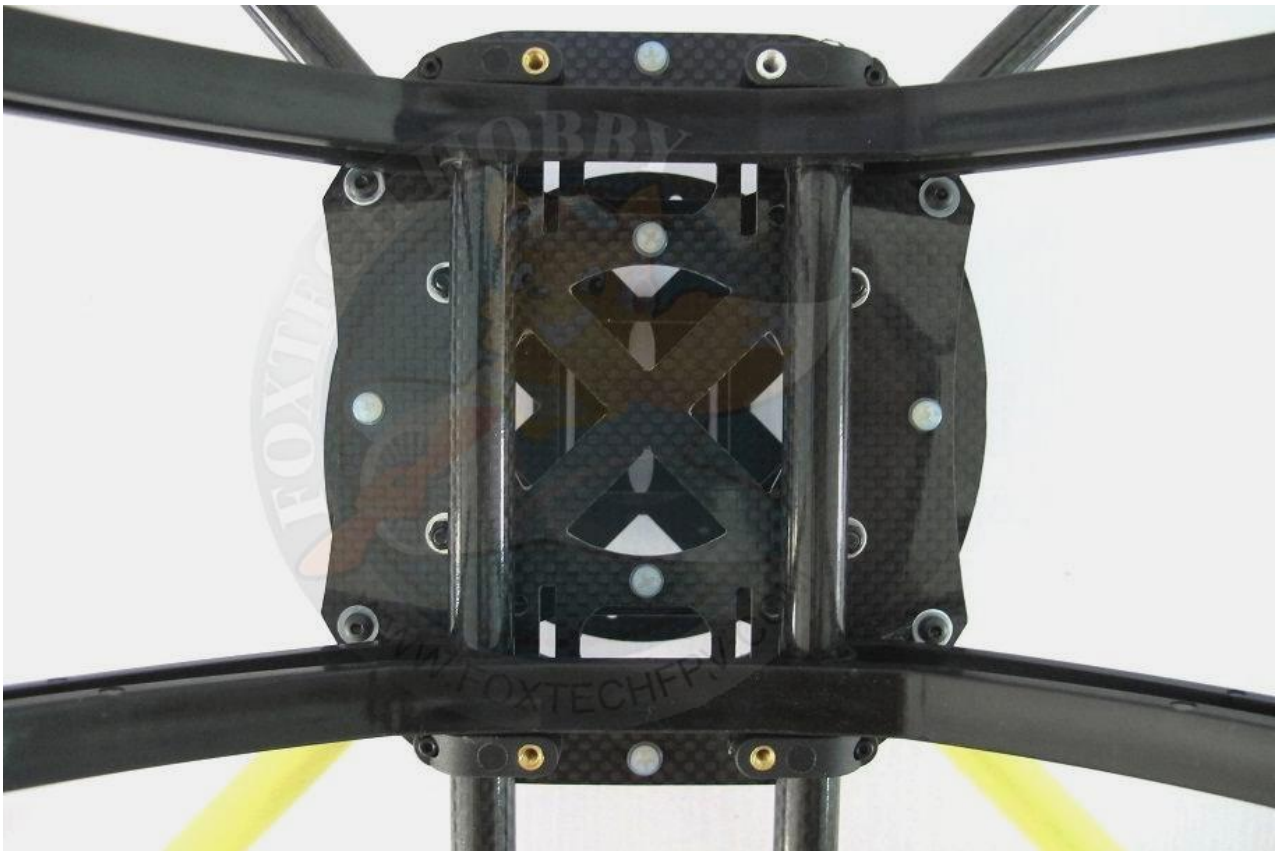



Assambly landing gear pipe

7. Finished



For more info ,please visit foxttechfpv.com to check more of our amazing products.