



TeleFlyOSD firmware updating instruction

1. Connect the USB Programmer to the TeleFlyOSD module.

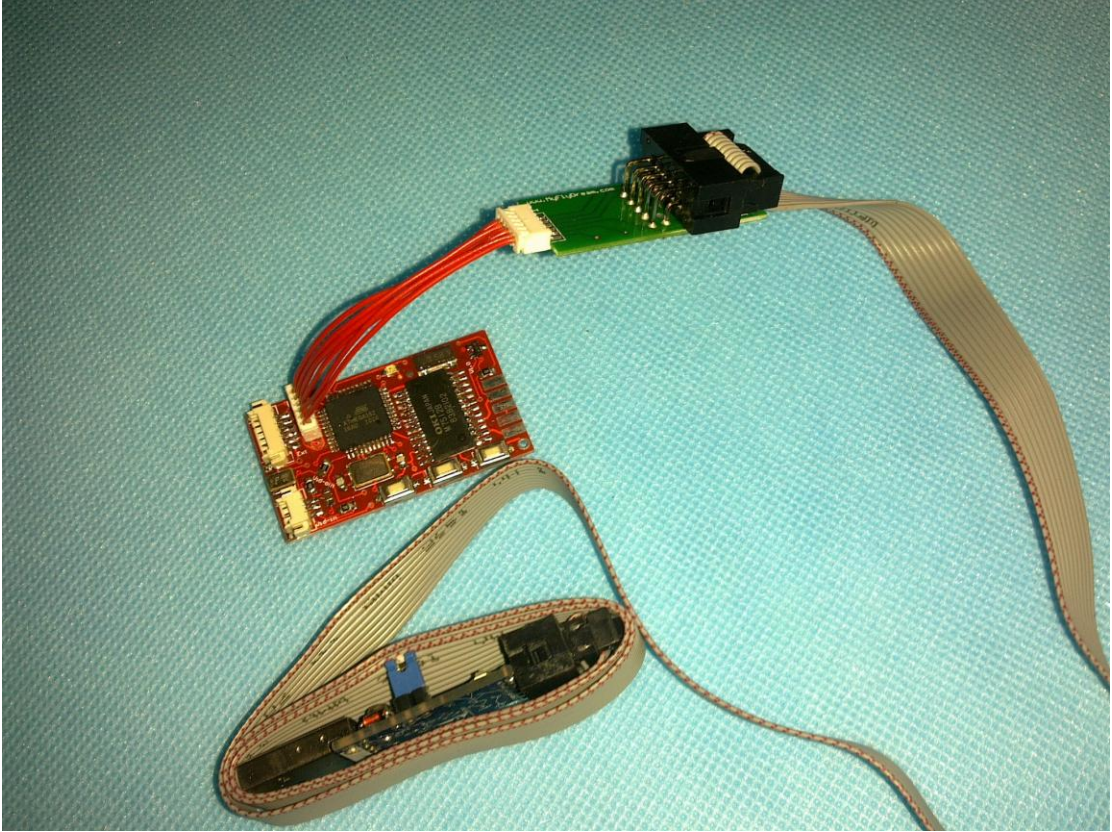


2. Run the updating program.

 轩微编程器控制平台.exe

3. Plug the USB programmer to the computer. The driver will update automatically. If the driver install successfully, this gray image will turn to a coloured one.



4. Click the "Load Project" button to load in "TeleFlyOSD_v1_1.xwprj" in the same directory.

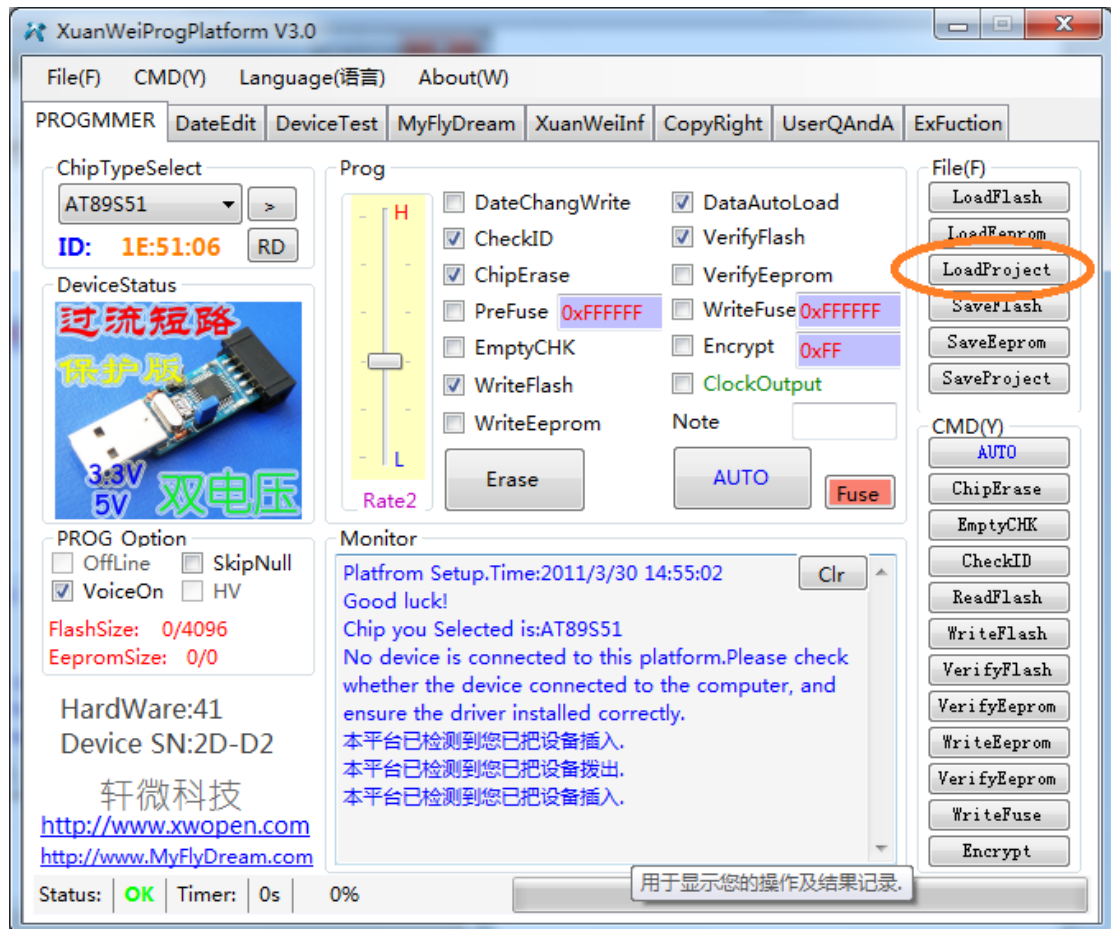

5. Click the "Auto" button. Wait until the updating finish.

