TM LINK APP USER MANUAL

Please download TM LINK to phone end before using WIFI LINK.





1. Connect white, red and black wires of WIFI LINK to the corresponding ports on DATA LINK of "-", "+" and "TX1".

- 2. Power DATA LINK on (2-12S voltage) and connect to ESC programming wires.
- 3. Open setting: Setting→WLAN. Search "TM-WIFI LINK" and connect. Default password is 12345678.

●●●●● 中国移动 4G 5:54PM くSetting WLAN	* 18% 🗔
@PHICOMM_02	a ? ()
@PHICOMM_02_5G	a
123123123	a
ChinaNet-FhJU	a ? (j)
ChinaNet-iTV-FhJU	₽ ╤ (j)
jiaot2500	a ≈ (j)
T-MOTOR	₽ ╤ (Ì
TM-WIFILINK	₽ ङ (Ì)
TP-LINK_9C9D	a ≈ (j)
Other	


4. Open TM LINK after connection, For iOS users, please trust "NANCHANG THREE LUCK MODEL CO., LTD" in Settings \rightarrow General settings \rightarrow Device management for normal operation.

THE SAFEST PROPULSION SYSTEM			
	Z Settings		


5.Click DATA LINK to enter pole interface (number of poles please refer to our website).

🗸 Data Record	Real-t	ime Data	Channel	History	Start
	Please fill	in the info	rmation firs	st.	
	Gear Ratio	1			
	Pole Count	14			
		OK			

6.Enter data interface and choose channel to be observed. Click "Start" to read data.

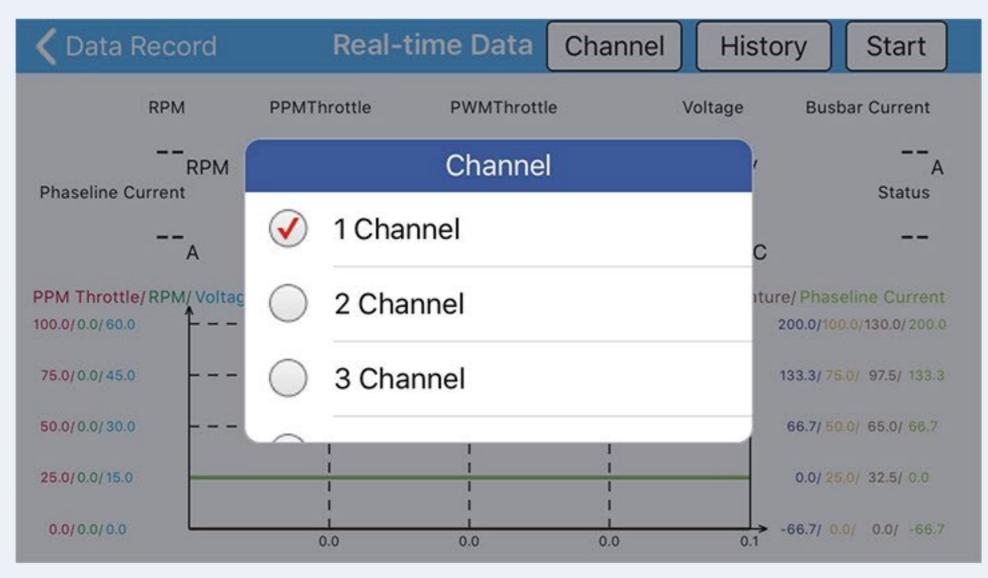

7.Click "End" to save or delete data. All the data are accessible in "History".

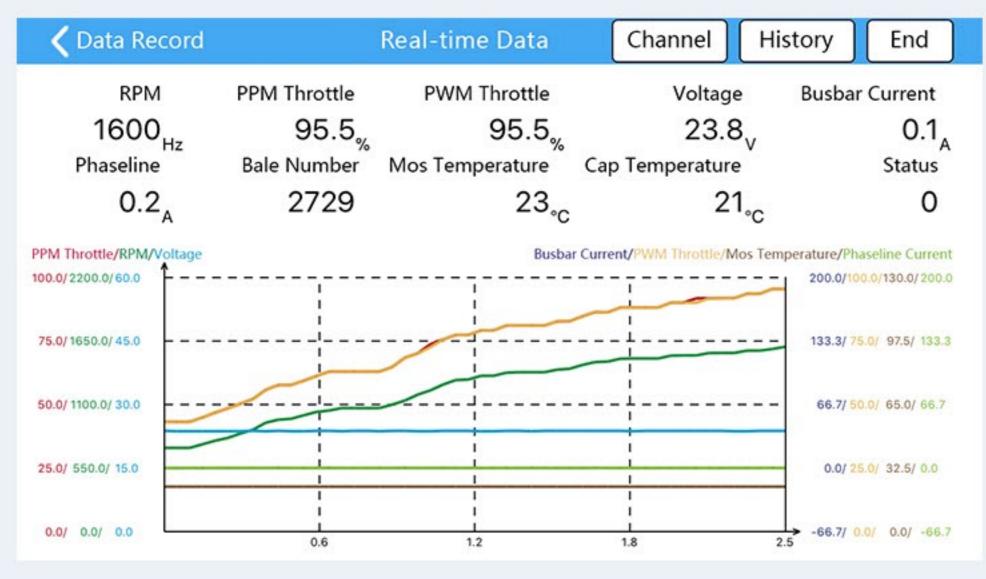

8.Language and WIFI LINK password can be changed in "Settings".

< Home	Settings	
Language	Language Selection	English >
WiFi Module Set	○ 简体中文	>
About	English	>

Settings	WiFi Module Settings	ОК
WiFi name	T-MOTOR	
Password	Password must contain 8 to 16 characters!	
Confirm PassWord	Eenter the WiFi password again	

If you encounter any problems using our products, please feel free to contact our distributors or T-MOTOR for technical support.