
FH-10Z POWERZOOM CAMERA INSTRUCTION

SPECIFICATION (RoHS Conform)

MODE NO.	FH-10ZN	FH-10Z	
TV SYSTEM	NTSO		PAL
IMAGE SENSOR		-inch CCD Image Sensor	
CCD TOTAL PIXELS	811(H) X	508(V) 795(H) X 596(V)
SCANNING SYSTEM	525 lines, 60		s, 50 fields/sec
SYNC SYSTEM		Internal	
MINIMUM Typical		Lux (F1.8, 5600°K) 50	
ILLUMINATION Star light Mo	ode 0.0	Lux (F1.8, 5600°K) 5	OIRE
RESOLUTION		520 TVL	
S / N RATIO	48dB (MIN)/52d	B(TYP) (AGC OFF, r=1,	APC OFF, Y-OUT)
WHITE BALANCE		ATW / AWB / FIX	
WHITE BALANCE RANGE		3200 ~ 9600 °K	
B.L.C. FUNCTION		Super BLC,48 zone BLC	;
GAMMA CORRECTION		0.45 /1	
AGC		AUTO (24dB max)	
ALC		AUTO / FIX	
IMAGE NEGATIVE		Select by OSD menu	
MONTION DETECT	011/055.0.1	48 zone (select by OSD)	P 1 6
CROSS LINE		ct by OSD menu (position	
FREEZE FUNCTION		arm in trigger or Select by	
ELECTRONIC SHUTTER		50) ~ 1/120,000 sec. / MA	
		LENS,F1.8(W)~2.9(T),f=4.	
LENS	Diagonal	W(56.4°) / T(
	Hor.	W(46.4°) / T(
	Ver.	W(35.6°) / T(
ZOOM	1	00X (10X Optical 10X Digit	al)
FOCUS		Auto / Manual	
POSITION		64 Position (Zoom, Focu	
VIDEO OUTPUT		site & Y/C output 1.0Vp-p	
CONTROL FUNCTION	RS	232C (With Driver), OSD	control
OSD CONTROL	Zoom, Focus	IRIS, WB, AGC, Position,	C-Gain, APC Gain
OSD LANGUAGE SELECT		ISH/CHINESS_Simp/JA	APANESE
COMMUNICATION BAUD RA		9600 BPS	
OPERATION TEMPERATUR	RE	-10°C TO 50°C	
OPERATIONAL HUMIDITY		within 85 % RH	
POWER SUPPLY		DC12V±1V / 3.6W(Max	()
DIMENSIONS		62mm X 36.8mm X 43.8m	

^{*}The specifications and appearance of the product may changed without notice.


Dimension (Unit: mm / ±0.5mm)

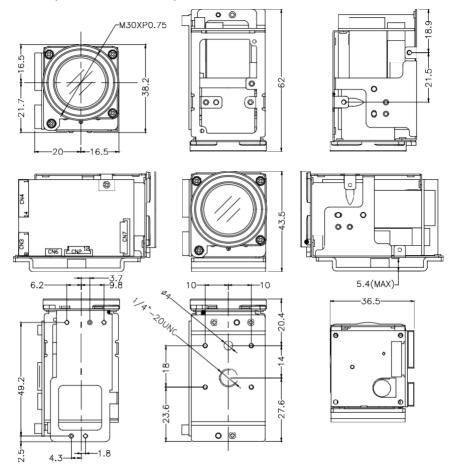



Caution for Installation

- 1. Avoid places where there is direct sunlight. When using the camera outside.
- 2. Be careful, never let any water in this equipment.
- 3. Do not directly touch the CCD element. If necessary, use a soft cloth moistened with alcohol to wipe off the dust.
- 4. When the camera installs in dust or wet environment, please puts into the camera housing.
- 5. Be extra careful not to shake the camera.
- 6. Avoid places where temperatures exceed 50° C or more.
- 7. When any abnormalities occur, make sure to unplug the unit and contact your local dealer.
- 8. The camera are only operated with regulative adaptor DC 12V, AC to DC non-regulative adaptor may cause camera damaged.

CONNECTOR

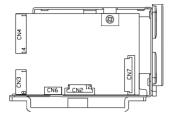

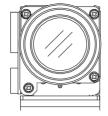

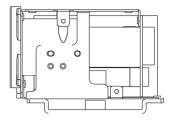

	CN4		CN3		CN2		CN6
P01	RXD	P01	GND	P01	DCK	P01	
P02	TXD	P02	DOWN (OSD-SW)	P02	D0	P02	505
P03	485CS	P03	UP (OSD-SW)	P03	D1	P03	FOR MANUFACTURE
P04	MASK-OFF	P04	PRI (OSD-SW)	P04	D2	P04	NOT RELEASE
P05	+12V DC-in	P05	ENTER (OSD-SW)	P05	D3	P05	NOTRELEAGE
P06	GND	P06	IRIS +/-	P06	D4	P06	
P07	Cout	P07	NEAR / INF	P07	D5		
P08	VBS	P08	TELE/WIDE	P08	D6		
P09	Yout		<u> </u>	P09	D7		
P10	+3.3V			P10	HD		
P11	ALARM-in			P11	VD		
P12	Motion out			P12	GND		
P13	V Rev.						
P14	H Rev.						

Attention: CN4

P01 . P02: RS-232C With Driver


P03: Open Collector

P11 、 P12: Signal level H=3.3V \pm 10%, L=0V \pm 10% P04 、 P13 , P14: Inside Pull up (OPEN 3V), Low active

Attention: CN3

P02~P05: Inside Pull up (OPEN 3V) , Low active

P06: OPEN OFF + 0V~0.7V(-)/2.3V~3V (+) P07: OPEN OFF + 0V~0.7V(INF) / 2.3V~3V (NEAR) P08: OPEN OFF + 0V~0.7V(WIDE)/2.3V~3V (TELE)

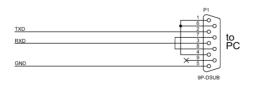

OSD FUNCTION SPECIFICATIO

[UP] : UP & RIGHT MOVE KEY

[DOWN] : DOWN & LEFT MOVE KEY

[ENTER] : ENTER KEY

[PRI] : PRE CONFIRMKEY

Push [ENTER] key 2sec. to get Into the MAIN menu.

Push [PRI] key 2sec. to leave menu.

MAIN DACE

If pushed [PRI] key, all set parameter data will be abandoned and return back to the previous menu page, this will occur while setting the parameter and without push [ENTER] key.

Push [UP], [DOWN] Two key at one time, screen will show COLOR BAR, want to recover normal display, Push again [UP], [DOWN] Two key at one time, screen will recover normal display

WAIN-FAGE			_								
	: : :	: :	:	: :	:	: :	:	: :	:		:
→I RIS	: : :	: :	:	: :	:	: :	:	: :	:		
BLC:	: : :	: :		: :	:	: :	:	: :	:	: :	:
A G C	S E N	:S:	:	: :		: :		: :	: :		:
C O L O	:R : :	: :	:	: :	:	: :	:	: :	:	: :	:
A P C	: : :	: :	:	: :	:	: :		: :	: :	: :	;
LENS			:	: :	:	: :	:	: :	:	: :	:
:R :E :V :		: :	:			: :	:	: :			
:P:0:S:I	:T :I :O	:N :	:	: :	:	: :	:	: :	:	: :	:
:I :D : :		: :	:	: :	:	: :	:	: :	:	: :	
PRES	:E :T :	: :		: :		: :	:	: :	:	: :	:
											-

NE	:X I	PA	ιGE							_		_		_						_		
	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
			-			:		:	:		:	:	:	:	:		:	:	:	:		
l :		A		K	~						·	·			· 	· 	·	· 	• •	· 	:	
	G	Α	M	M	A	:	:	:	:	:	:	<u>:</u>	:	:	:	:	:	<u>:</u>	:	:		!:
	Р	0	W	Έ	R	:	O	N	:	:	<u>:</u>	-	-	:	<u>:</u>	<u>:</u>	<u>:</u>	:	-	:	:	
	M	0	ΞŢ]	O	N	:	:		:	: -	<u>:</u>	:		:		:	<u>:</u>	:	-		; !
	M	Α	S	K	:	-	:	:	:	-	-	-	-	:	:	:	:	:	-	-	:	
	0	S	D	-		:	:	:		:		:	:						:			!
	Z	0	O	M	+	Ā	F		:	:	:	:	:	:	:	:	:	:	-	:	:	
	L	Ά	:N	G	Ü	ŀΑ	G	ΞE	:	:	:	:	:	:	:	:	:	:	:	-	:	:
	С	Ю	:M	:M		1	D		-	:	:	:	:	:	1	1	1	1	:	:		
	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	: ;	
		-	[[1	[ĺ	[ĺ-	Ī	Ī		1	7				-	1		

Push [ENTER] 2 senc, get into the main menu

There are 19 items on the main menu, by up/down key to select item and push [ENTER] key to get into sub-item menu.

5

8-001-0645-RH (A1)

[01]. IRIS SELECT MEN


	•				`								_	_				_	_	_	_	
		:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
	I	:R	ī	S	:	:	:		:											:	:	:
		-:-	:		:	:	:	:	:	:	:	:	:	:	:			:	:	:	:	:
		:	:	:	:	:	:	:	:	-	:		:	:	:			:	:	:	:	:
		-			:	:	:		:		:	:	:	:	:			-	:	:	-	:
1	→	ŀΡ	ΞE	Α	K	:→	0	F	F			:		:	:	:		:	:	:	:	:
		:	:	:	:	-	0:	N	:			A -	;-	-	-	ı	-	:-	-	-	ŀР	:
2		ΞA	L	C	-	: :→	: A	·U	Τ	(•	-	-	-	: :		-	-	-	-	-	:
			-				F	į	X			-	-	-	-		-	-	-	-	:	-
3		Α	Έ	s		-	A	U	Т	()	-	-	-	-	•	-	-	-	-	-	:
		:		:	:	.→	F	:1	Χ		:		1	/	1	0	0	0	0	:	:	:
											-						[[[

This is used to control the iris & shutter speed of the lens. It included 3 items "PEAK", "ALC", "AES".

- ① 「PEAK」 is used to control the reaction of auto iris, which is based on the average light of picture signal or the light rate of the peak.
- ② 「ALC」 is used to select AUTO or FIX. Adjust IRIS level
- ③ 「AES」 is used to select electronic shutter be AUTO or FIX function, at AUTO mode can be adjust AES level, at FIX mode can be selector shutter speed at below, [OFF], [1/100sec], [1/250sec],

[1/500sec], [1/1000sec], [1/2000sec], [1/4000sec], [1/1000sec] After setting, push [PRI] key to go back to the main menu page.

[02]. BLC SELECT MENU

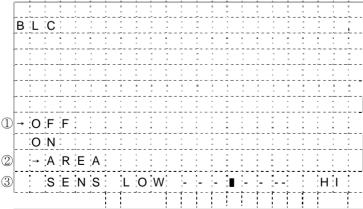

This is used to control "BLC" (Back Light Compensation),

① 「BLC」 ON / OFF selector.

Selector ON has 2 sub-items: AREA, SENS.

- ② 「AREA」: 48 BLC zones can be set separatly. According to the mask area (BLC zone) signal to decide the iris and shutter speed.
- ③ 「SENS」: Is used to enhance the BLC effect.

 After setting, push [PRI] key to go back to the main menu page.


[03]. AGC, SENS SELECT MENU

-	-	-		-	-		-		-		-		-		-		-		-	-		-		
		1	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
		: A	G	Э	•	S	ΞE	ΪN	S	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
	_	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
	_	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	
	_	:	:	:		:		:	:	:	:	:	:	:	-	:	:	:		-	:	:	:	
1		:	:F	r	е	е	٠z	е	:	:	:	0	F	F	:	:	:	:	:	:	:	:	:	:
	_	-		-	-		-	-	-	-	-	0	N		-	-	-		-	-		-		-
	_	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	
		:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:]
2		:	:A	G	С	:	:	:	Α	Ü	T	0:	:	;-	:-	; -	; -		:-	: -	;-	:-	:	:
3		;	S	Έ	ΞN	S	;	:	ΞA	:U	ΞТ	-O	:	:-	:-	;-	:-		;-	: -	.;-	:-	;	:
	-	Ţ]]]	Ţ	Ī	[[[[Ī	T

This is used to select 「FREEZE」 and 「AGC」& 「SENS」 function.

- \bigcirc FREEZE $_{\perp}$ ON / OFF : ON (Freeze) / OFF(Unfreezef) .
- ② 「AGC」: To adjust auto gain control, 0dB, 2.25dB, 4.5dB, 6.75dB, 9dB, 11.25dB, 13.5dB, 15.75dB, 18dB, 9 steps adjustable.
- ③ 「SENS」: For low light application: 0 Frame, 6 Frame, 12 Frame, 16 Frame, 18 Frame, 22 Frame, 24 Frame, 30 Frame, 36 Frame, 9 steps adjustable.
 After setting, push [PRI] key to go back to the main menu page.


[04]. COLOR SELECT MENU

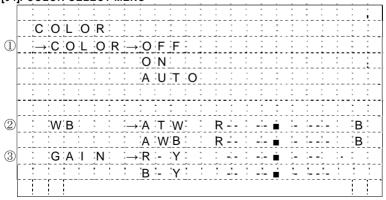

This is used to control the color ON/OFF and white balance and the gain rate of RED & BLUE color.

- ① 「COLOR」 selector: OFF is monochrome image, ON is normal color image, AUTO is at low light AGC up, display image will be auto change to monochrome image.
- ② 「WB」 White balance control: ATW is Auto trace white balance, can be adjust offset level. AWB is One push white balance. Push [ENTER] key 「AWB」 will start flicker, until flicker stop it will lock the current color temperature at the same time.
- ③ 「GAIN」: The gain rate of R-Y & B-Y can be adjusted separately. After setting, push [PRI] key to go back to the main menu page.


[05]. APC SELECT MENU

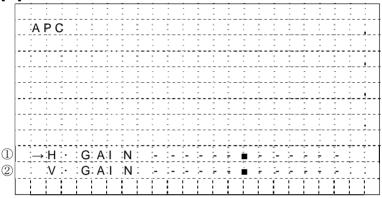

This is used to enhance the compensation of the picture quality.

- ① 「H GAIN」: Horizontal Compensation
- ② 「V GAIN」: Vertical Compensation After setting, push [PRI] key to go back to the main menu page.

[06]. LENS SELECT MENU

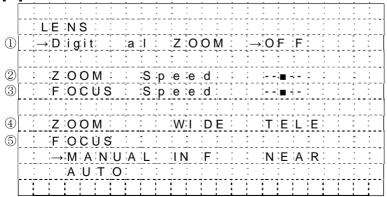

 $This is used to control the \,montion \,of \,the \,lens, \,included \, "Digital \,ZOOM" \,ON/OFF \,and \,times \,set function.$

- ① 「Digital ZOOM」 selector: OFF、X2、X4、X6、X8、X10.
- ② 「ZOOM Speed」: Set the speed of the zoom.
- 3 FOCUS Speed \bot : Set the speed of focus.
- ④ 「ZOOM」: Lens ZOOM adjust WIDE / TELE
- ⑤ 「FOCUS」: AUTO / MANUAL setting
 After setting, push [PRI] key to go back to the main menu page.


[07]. REV. SELECT MENU

-							_				_												
	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:		:	:
	 :R	Έ	٠V			:	:	:	:		:	:											:
	 :		:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:		: :	:
1	 :—;	·P	:0	S	1	:/	ΞN	ΞE	:G	Α:	:	:	:	:	:		:	:		:	: - :		:
		:	·P	0	S		:		:		:	:	: :	 -	· •	e							
	 :	:	:N	Έ	G	ΞA	:	:	:	:	:	:	:	:	:	:	:	:	:		:		: -
		:	:	:	:	:	:	:	:	:	:	:										:	
2	 :	Н	-	R	Έ	٠V	:—	:0	F	F	:	;	;	:	;	:	:	:		:			- 1
	 :	:	:	:	:	:	:	:0	N	:	:	:	:	:	:	:	:	:	:		:	:	
3	 :	٧	·	R	Έ	٠V	:→	:0	F	F	:						:						:
	 :	:	:	:	:	:	:	:0	N		:	:	:	-									: -
		Ī	Ī																				

This is used to select image 「Positive」 and 「Negative」 & 「Horizontal Reverse」 and 「Vertical Reverse」 function.

- (1) 「POSI/NEGA」: Image positive & negative select.
- ② 「H.REV」: Horizontal Reverse (Mirror) ON/OFF
- ③ 「V.REV」: Vertical Reverse (Up-side down) ON/OFF After setting, push [PRI] key to go back to the main menu page.

[08]. POSITION SELECT MEMU

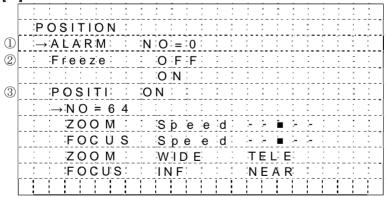

This is used to set <code>[ALARM-IN]</code> function, either <code>[ALARM POSITION]</code> or <code>[IMAGE FREEZE]</code> .

- ① $\lceil ALARM\ NO. \rceil$: Set alarm position(1~64), if set to (0) alarm position is not enable.
- ② 「Freeze」: Set ON mode, 「ALARM-IN」 is freeze trigger input.
- ③ 「POSITION」: The alarm position have 64 steps (position) can be programed. By this program, the zoom & focus may go to the exactly position where is programed. After setting, push [PRI] key to go back to the main menu page.

[09]. TITLE SELECT MENU


	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	
	 Τ:	ľΤ	Ľ.	≣	:	:	:	:	:	:	:		:						:	:	:		
1	 	::		-:	:	:	:	:	:	:	-	:	:	: :		:	:	:	:	:	:	:	:'
2	 :	:_	÷:0	12	2:3	4 5	6	7 8	:9	:	-	:	:				:	:	:	:		:	
	 :	:	Ä	В	С	:D	Έ	F	G	Ή	1.	Jk	ξ L	M			:	:	:	:	:	:	:
		:	ΞN	0	P (Q F	:S	Τl	Ĵ۷	:W	X	ΥZ	<u>?</u>	: :						:		:	
		:	a	b	¢	d	e	f: (għ	i.	j	k	1	m					:	}		:	
	 :	:	⁻n	Ö	рo	ą∶r	s t	u	٧V	Ń)	∢ y	z	:	: :	:	:	:	:	:	:	:	:	
		:	:	:;	? "	:,	÷ >	()	:[]	{}	<u> </u>	-	- '	/									
3	:	Ü	Р	;	;	;	:	:	;	:	:	:	:	: :		:	:	:	:	:	:	:	:
	 :	D	0	W	Ň	:	:	:	:	:	:	:	:	: :			-	:		:		:	:
	:	-			-	-			-	:	-									-	:		

This is used to set up the ID figures & position on the screen. (Title setting)

- **1)**TITLE start position selector.
- 2)TITLE Character selector.
- 3TITLE display position UP or DOWN selector.

After setting, push [PRI] key to go back to the main menu page.

[10]. PRESET SELECT MENU

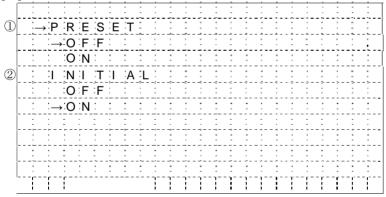


This is used to select the camera go back to "PRESET", "INITIAL", "PHASE" condition

- ① 「PRESET」: Set to ON camera will be reset and set to default data.

The menu at next page at "PRESET" position push [DOWN] key can into this menu.


[11]. MARK MENU

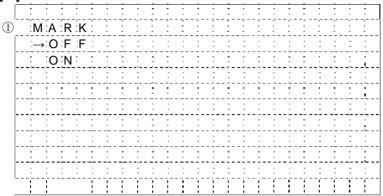

This is used to select the cross line display ON / FF.

① 「MARK」: Cross line ON/OFF select, set ON cross line display, set OFF cross line is hidden.

[12]. GAMMA MENU

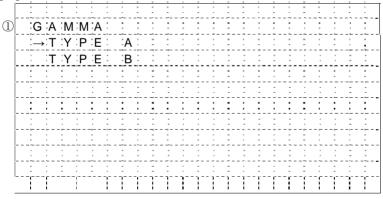

This is used to select the camera gamma correction.

① 「GAMMA」 select: TYPE-A gamma is 0.45, TYPE-B gamma is 1.0


[13]. POWER ON MENU

•																								
			:	:	:	:	:	:	:	:	:	:	:	:	:	:	:		:	:	:	:	:	:
			P () =W	E	R	:	:0	ΪN	:	:	:	:	:	:		:		:	:	:	:	:	:
1	:	_	→ E	3:L	:U	ΞE	:	:B	A	:C	K	:	:	:	:	:	:	: -	:	:		:	===	:
			: <u> </u>	→ :O	F	F					-	-								·				
	:		:	:0	ΞN	:	:	:	:	:	:	:	:	:	:	:		:	:		:	:	:	:
			Ï	- :O	S	1	:Т	Į:	:0	ΞN	:	:	:		:	:		:	:	:	:	:	:	
2			-	→ 'O	F	F	;	:	:	:	:	:	:	:	:	:	:	:	:	:			:	
3			:	:0	ΞN	:	ΞN	0	=	: (6:4	-	:		:				:	:		-		:
Ì	:		:	:		:	:	:	:	:	:	:	:		:				:	-			:	:
Ì			:	:	:	:	:	:	:	:	:		:	:	:	:		:	:	:		:	:	
Ì			:	:	:	:	:	:	:	:	:	:	:	:	:	:	:		:	:	:		:	
			Ī	Ţ	-	Ī	Ī	Ţ	-	Ï	Ī	Ī								[[[[[

This is used to select the camera power on state.

- ① 「BLUE BACK」: Set to OFF camaer power on initial is normal display, Set to ON camaer power on initial is display blue back.
- ② 「POSITION OFF」: Camera power on lens position is current position.
- ③ 「POSITION ON」: Camera power on lens position is go to the designation position(1~64).

[14]. MOTION MENU

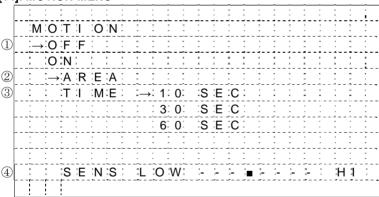

This is used to select the montion detcet function.

- 1) Motion detect ON / OFF select.
- 2 Motion detect area select.
- 3 Motion detect output time select.
- 4) Motion detect sensitive adjust.


[15]. MASK MENU

	:	:	1	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	1	:
Ì	 M	ŀΑ	:s	K	:	:	:	:	:	:	:	!	:	:									:
1	 \rightarrow	Р	О	S	-	T	1	О	N	:	ΞN	0	=	6	4		:	:	-		:	:	:
2	 :	M	A	S	ΞK	:	ΞN	0	:=	: 1	:	:	:	:	:	:	:	:	-	:	:	:	:
3	:		:	:	<u> </u>	:→	ŀΟ	F	F	:			:										
4	 	:	:	:	:	;	Ю	ΞN	:	:—;	·Ή	:-	S	Т	Α	R	Т	:=	2	0	:	:	:
5	 :	:	:	:	:	:	:	-		:	Н	: -	Έ	N	D		:	=	2	0			-
6					-	:	:			:	٠V	-	S	Т	Α	R	Т	=	2	0	:		:
7		:	:	:	:	:	:	:		:	٠V	;-	Έ	ΞN	D			:=	2	0	:	:	: [
8		:	:	:	:	:	:	:	:	:	:C	:0	N	N	Έ	С	Т	.→	0	F	F	:	:,
	 :		:	:	:	:	:	:	:	:	:	:		:			:	:	0	Ν	:	-	:
	 [[T			-	Ţ												

This is used to select mask area size and position for each setable lens position.

- ①Lens position no. select(1~64)
- 2MASK NO. select(1~4)
- 3)MASK area display ON / OFF select.
- (4) Hor. direction start position.
- (5) Hor. direction end position.
- 6 Ver. direction start position.
- (7) Ver. direction end position.
- ®ZOOM action to link mask area, ON / OFF select..


[16]. OSD MENU

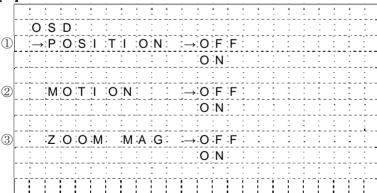

This is used to select on screen display ON / OFF select.

- ①POSITION NO. display ON / OFF select.
- 2MONTION action display ON / OFF select.
- ③ZOOM times display ON / OFF select.

[17]. ZOOM+AF MENU

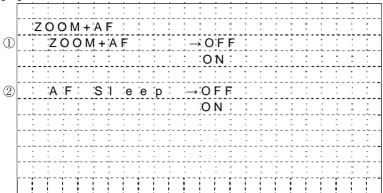


This is used to select an occasion for auto focus action.

- 1) ZOOM stops time execute lens focus once, action OFF / ON select.
- 2) AF Sleep function ON / OFF select.

(As show screen stillness about 5 minutes cameras come into AF Sleep mode namely, as screen has bigger change time come back again act for normal mode namely.)

[18]. LANGUAGE MENU

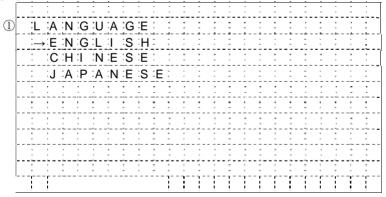

This is used to select OSD manu display language.

①OSD display language select, ENGLISH / CHINESE(Simp.) / JAPANESE

[19]. COMMUNICATION ID MENU

	-				_	_	-				-		-	-		-		_				_	-	-
				:	:	:	:	:	:	:	:	:	:	:			:		:	:	:			:
		С	O	M	M	Ξ.	1	:D	:	-	:	-											:	
1								- <u>-</u> -		:=-	<u>∵</u> 1				:	:	:	:	:	:		:		:1
															a – – -	a	a			a	<u></u>	a		1
2			M	:Ο	ΞD	ΞE	:	:	:	:→	:1	::	:1	:			. :		:	:		:		
				:	:	:	:	:	:		:1	:	:N	:			:	-	:		:			
													<u>-</u> .											
																				-				
							·		·		<u> </u>	<u> </u>		·		·	·							
											-							-						
			<u>.</u>	<u>.</u>	. <u>.</u>	<u>.</u>		<u>.</u>					<u>.</u>				· 			· 	<u>.</u>			
		-		-		-				-			-		-		-		-	-				
		-		-		-		-		-			-		-		-		-	-		-		
		1		1				1			7	1	,	,					-		?			
							-		-		-						-	-	-				-	
i																								
		-		-		-				-			-		-		-		-	-				
			~																		~			
												-									-			
								- -						-	i				÷	÷				
		i	i	i			i	i			i		i	i	i	i	i		i	i	i		i	

This is used to select communcation ID and mode.

- ①Communication ID number's set.(Enactment supply controller identification camera uses ID number.)
- ②MODE choice
 - 1:1: One controller to control one Camera.
 - 1:N: One controller to control many Camera.